

FIG. 1

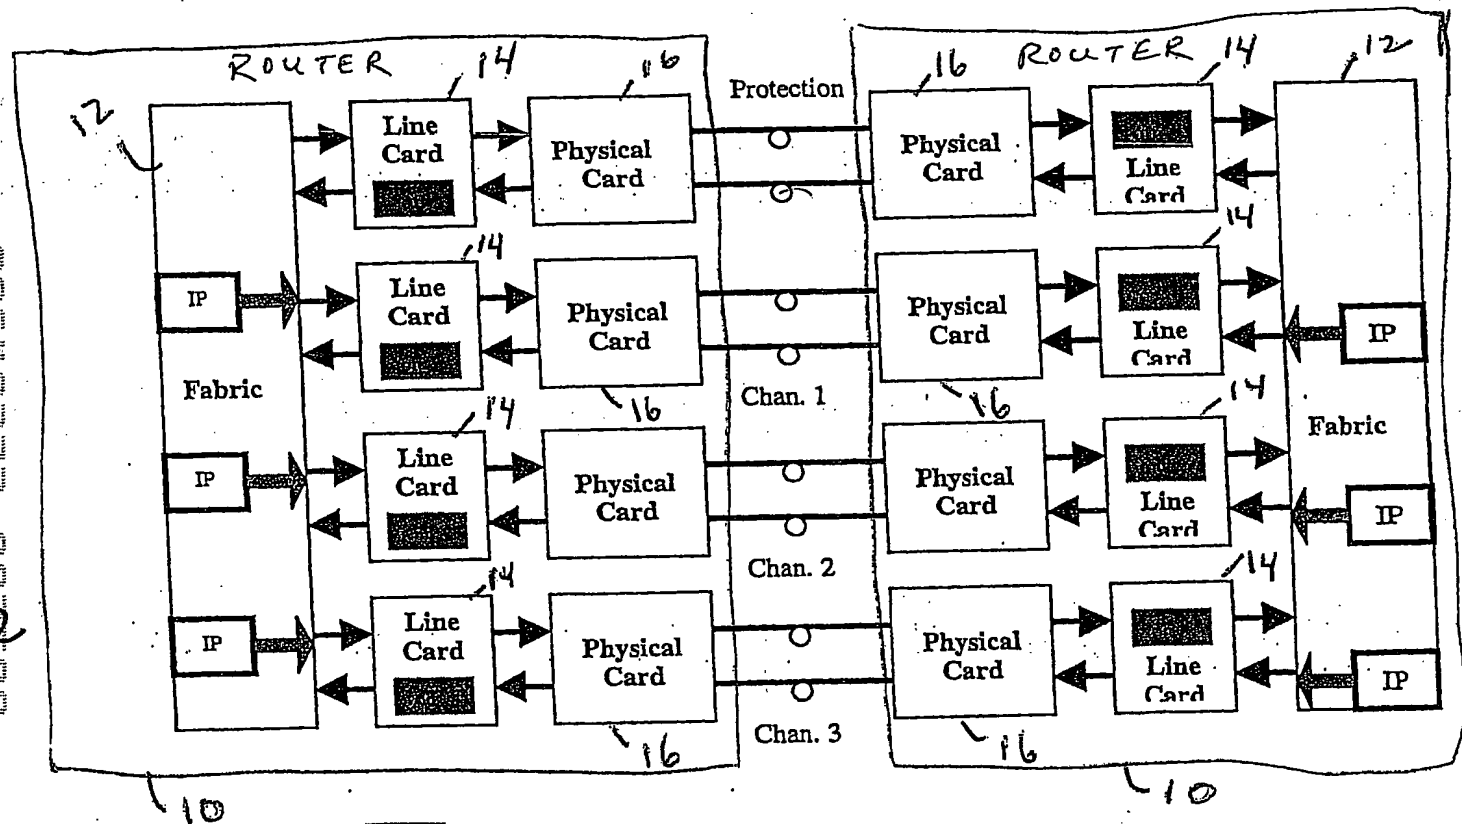


FIG. 2

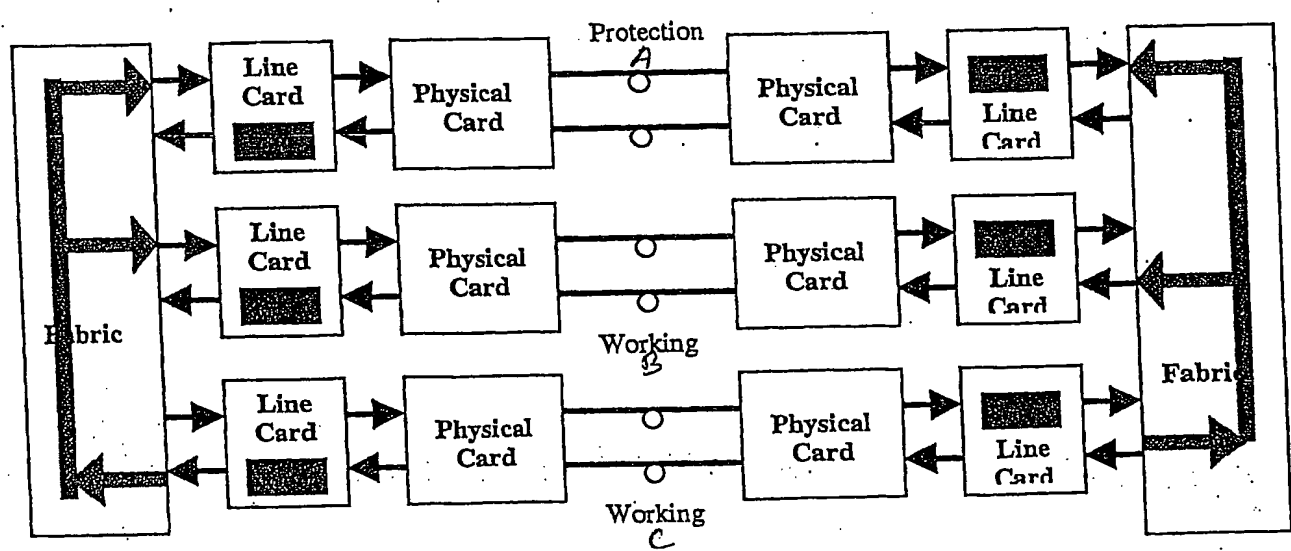


FIG. 3

100
Configure line cards

(Protection line card configured same as working line card)

↓
Enable multicast and unicast bridge 102

↓
Detect working line card failure 104

↓
106 — Disable working card's physical card interface

↓
108 — Enable protection card's physical card interface

FIG. 4

110
Configure line cards

(Protection line card configured same as working line card)

↓
Receive notice of line failure -112

↓
Enable multicast and unicast bridge -114

↓
116 - Disable working card's physical card interface

↓
118 - Enable protection card's physical card interface

FIG. 5

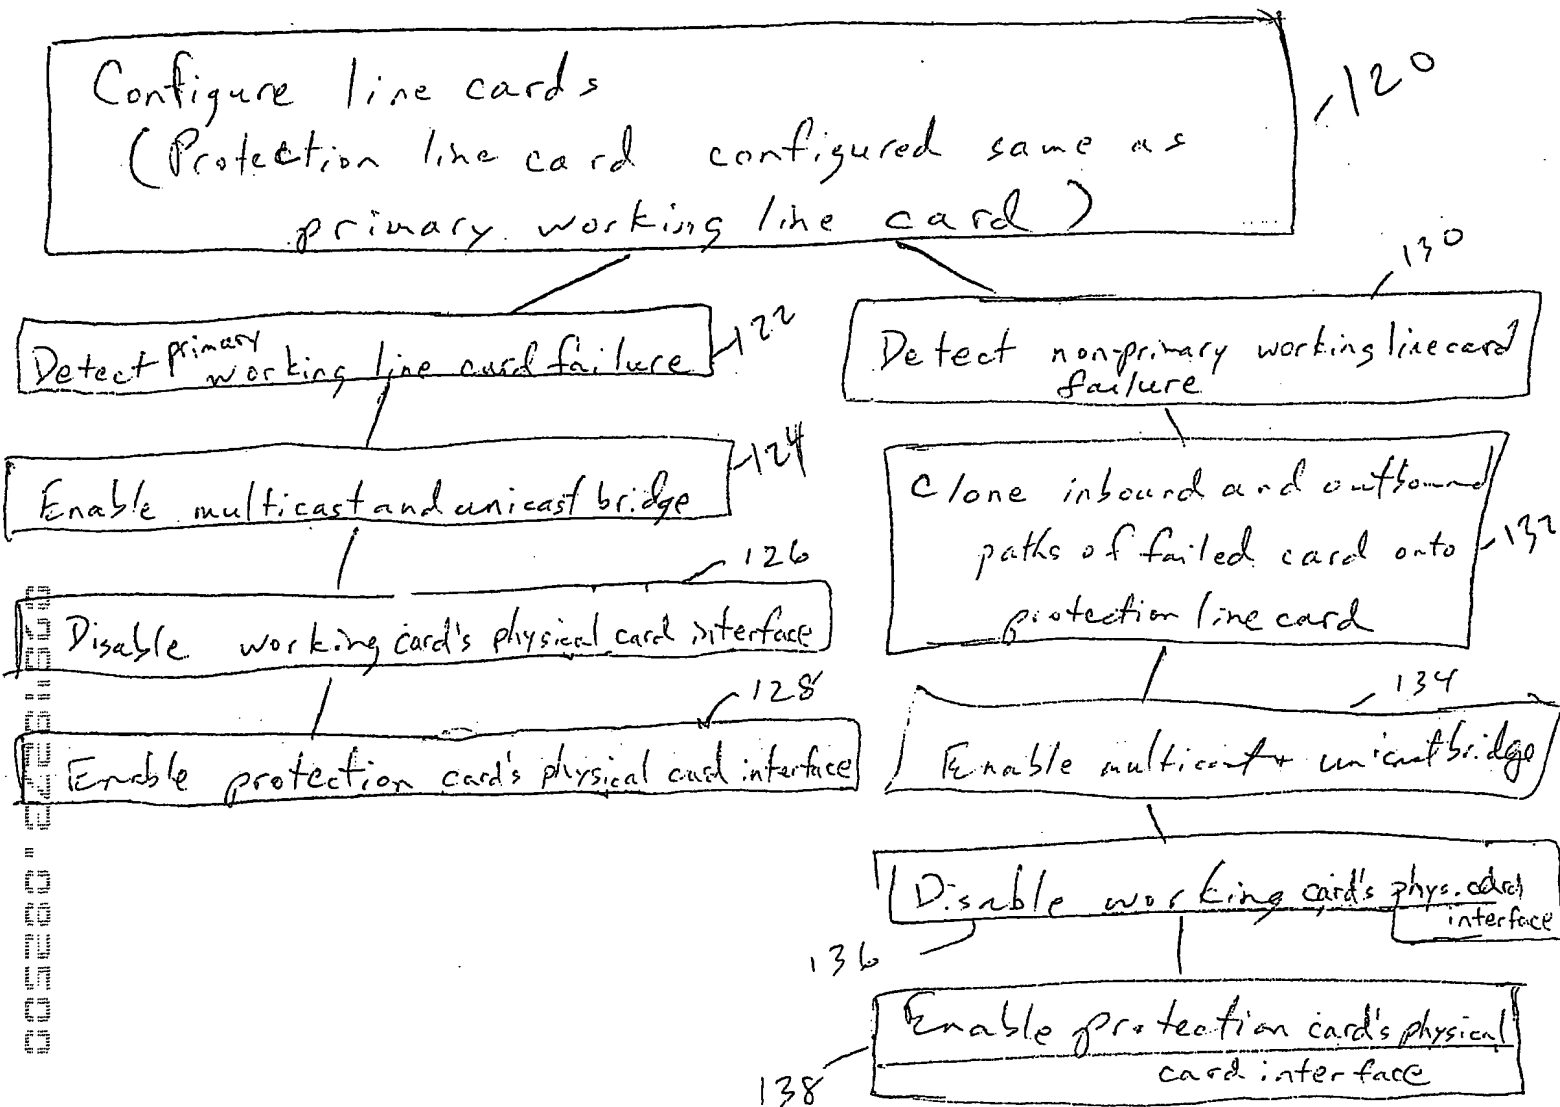


FIG 6

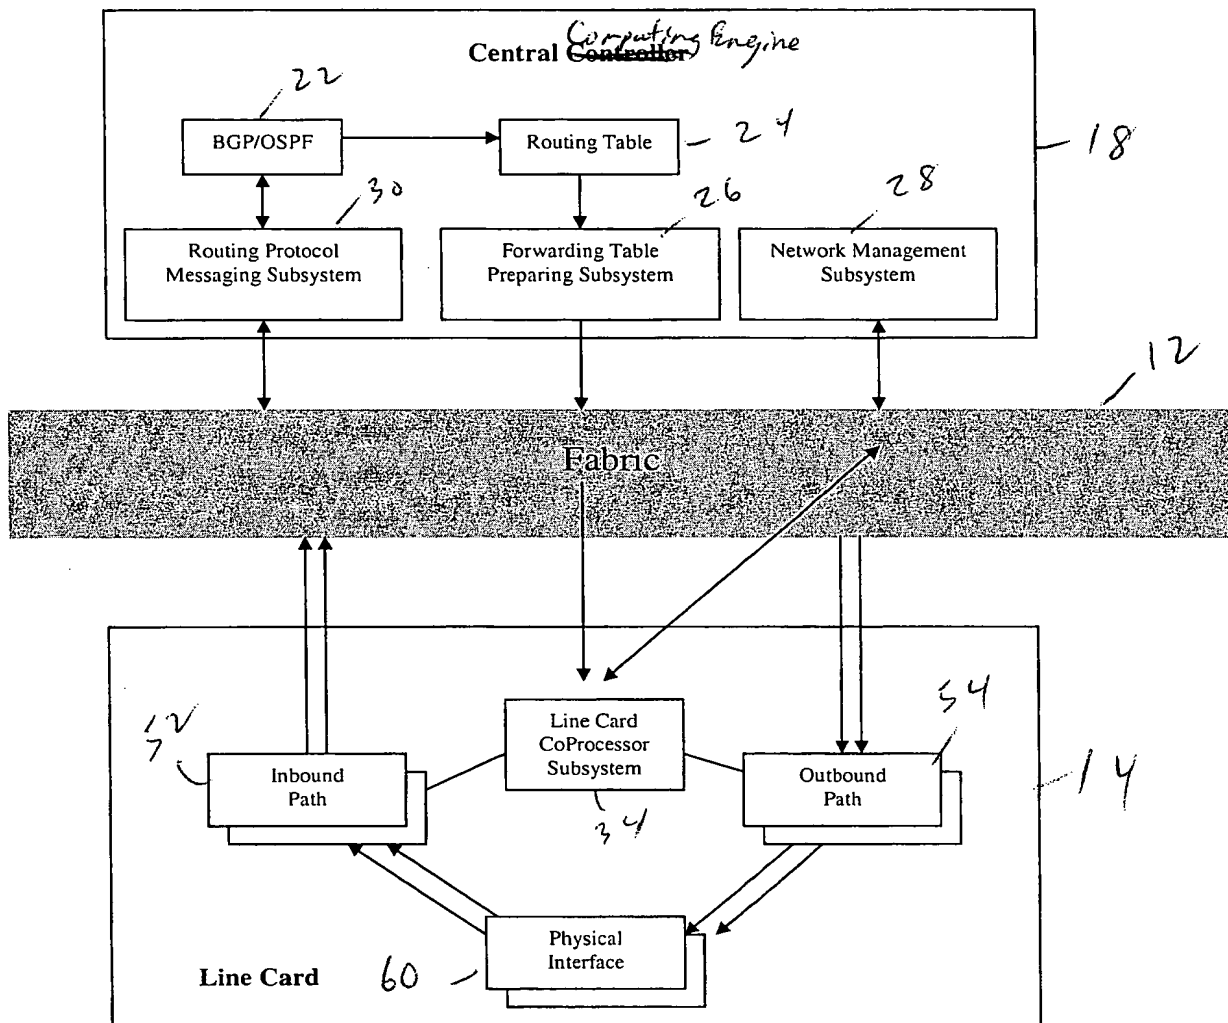


Figure 7

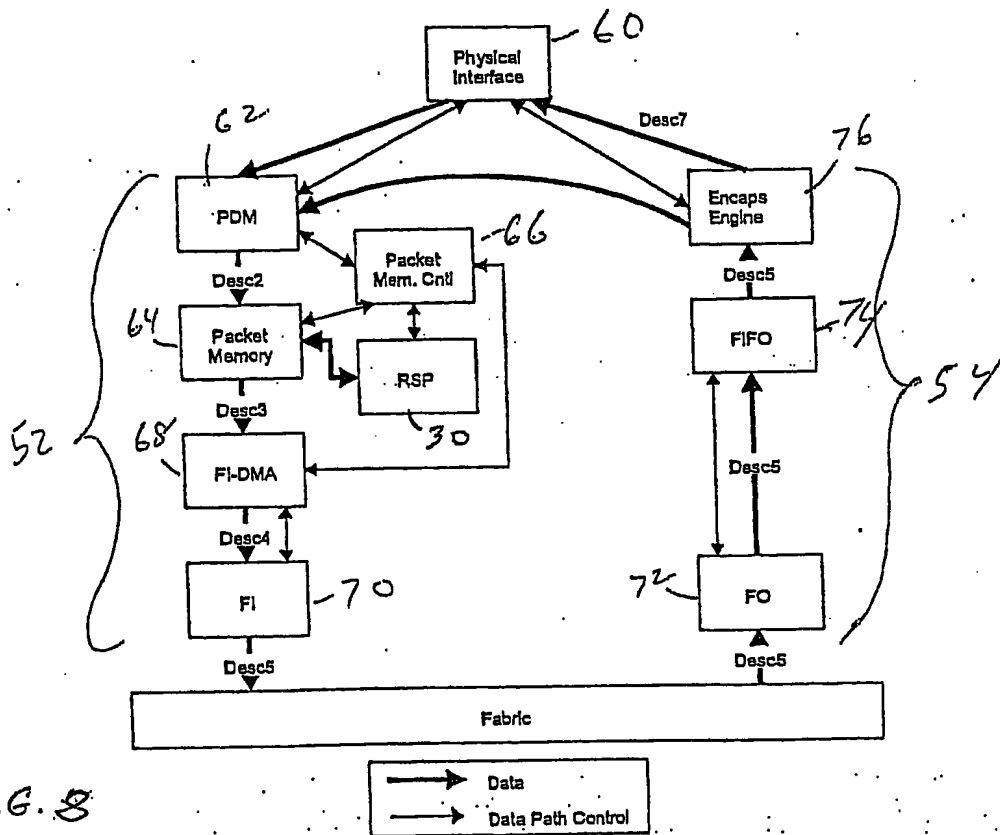


FIG. 8